

To install magazine base plate:

- Disassemble the magazine and remove the load assist tab pictured below
- Re-assemble magazine using NDZ magazine base plate
- Insert set screw into threaded hole
- Using hex wrench, tighten until snug

DO NOT OVER TIGHTEN

NOTE: By removing the load assist tab, the slide will not lock back after the last round

